

# step 1


line up far left edge of circle  
with this point

the highest  
point here is 21"

there should be excess  
to tuck up under bumper

use 1.5" spacer  
from water line up to bottom  
of circle tip


this bottom tip  
can set on water  
line or be 1/2" up

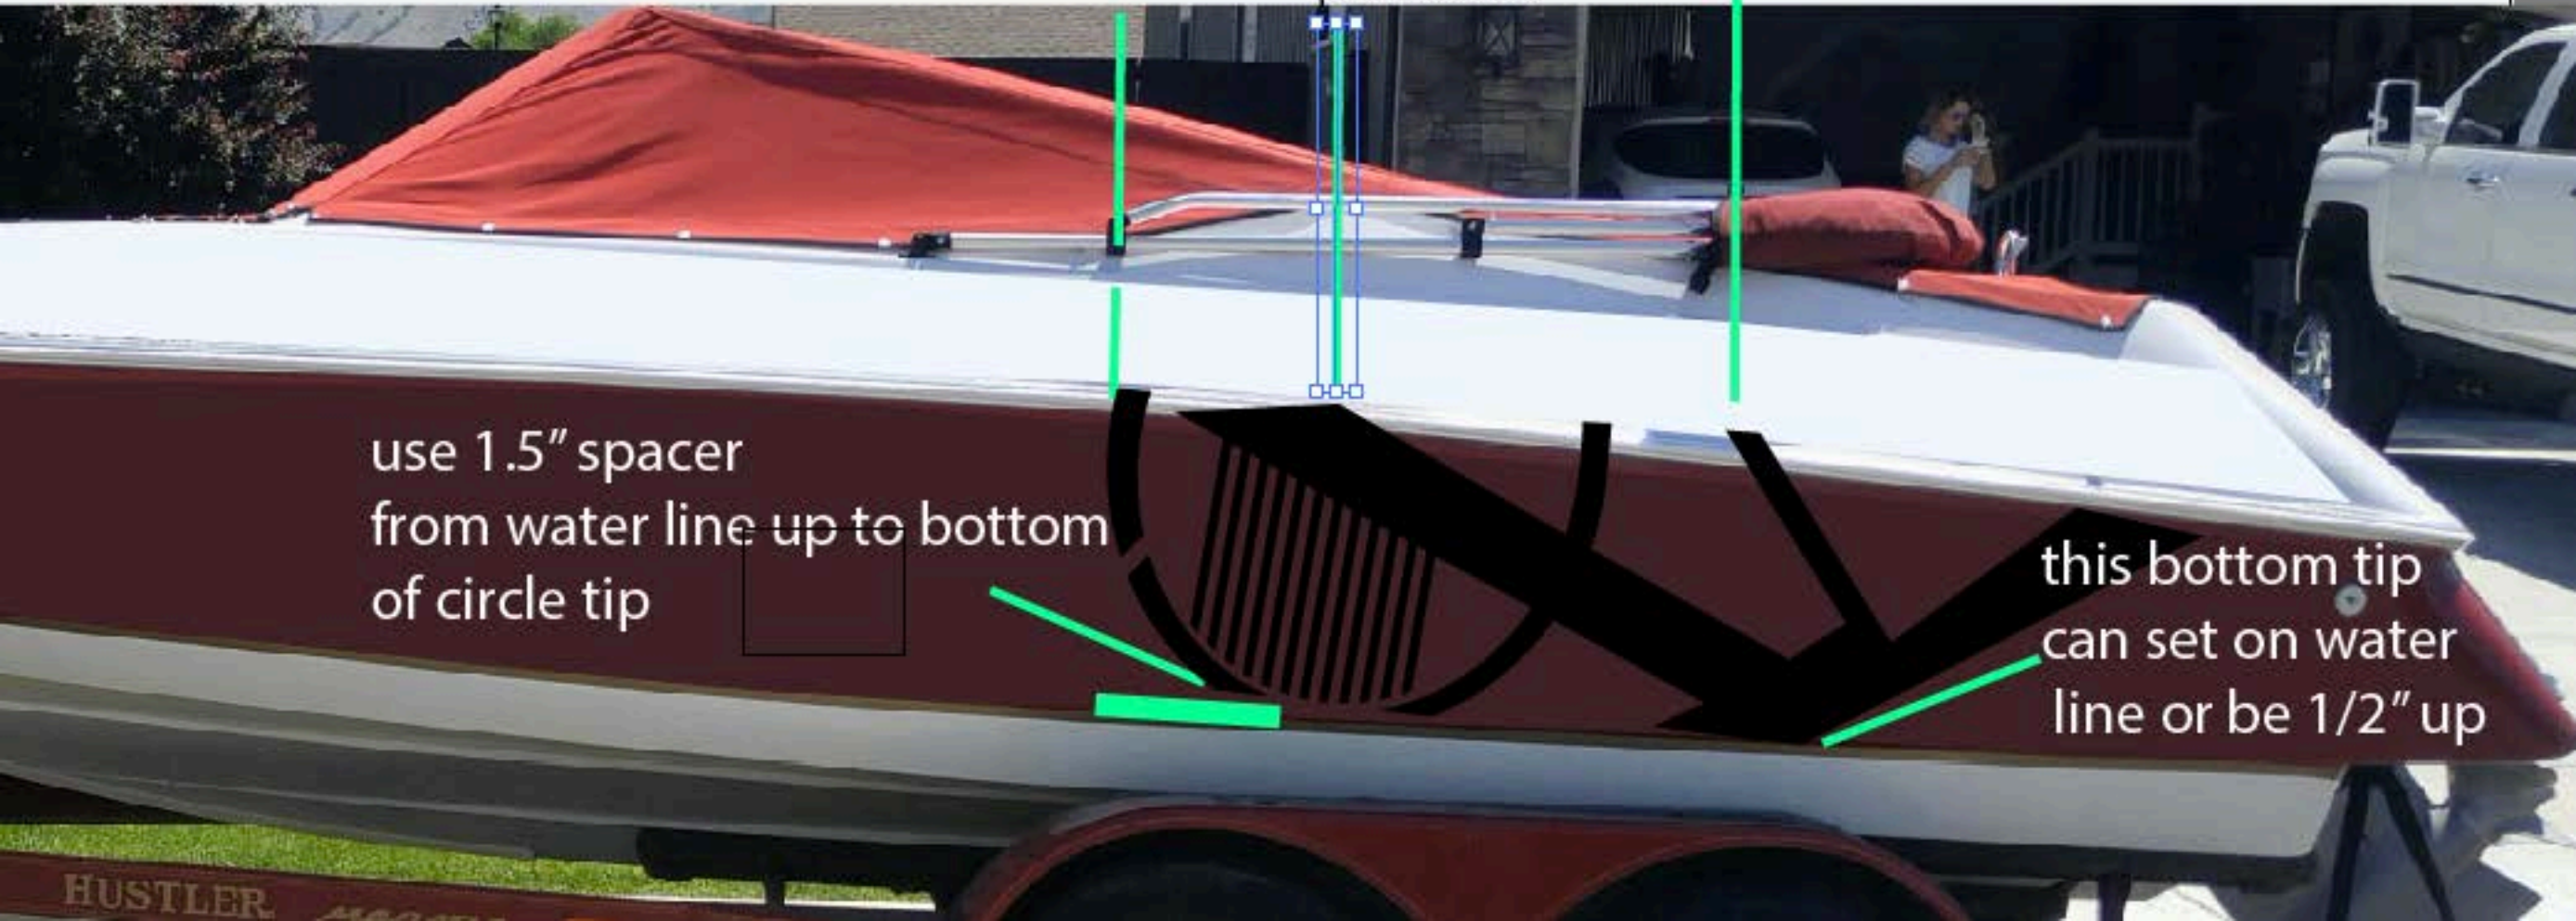

# step 2

tape into place.(green painters tape )  
using hinge method  
do one side at a time

spray boat and back of  
decal with solution  
keep wet.. squeegee til  
no more water.

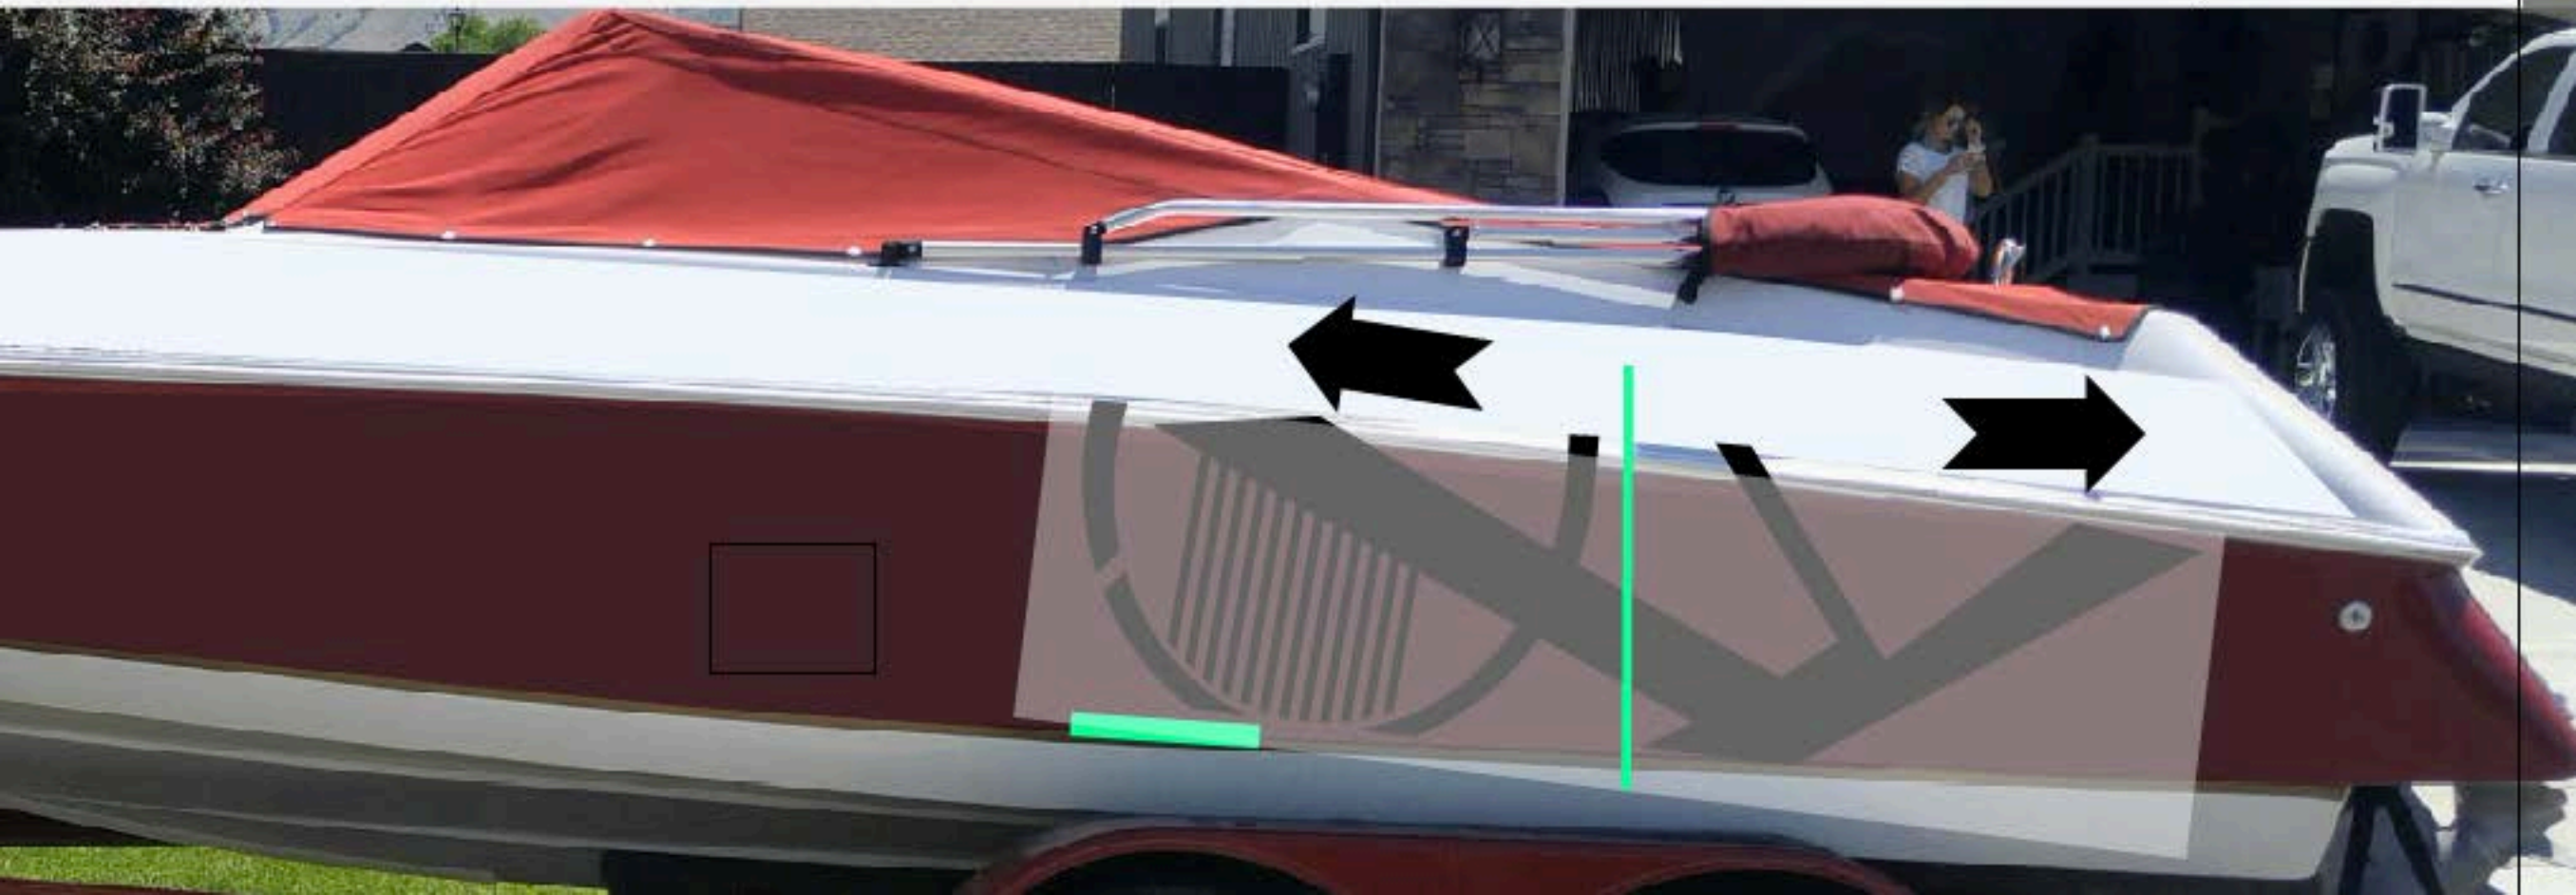

# step 3

peel away premask and any other bubbles remaining spray vinyl and squeegee out




the highest  
point here is 21"

there will be excess to trim  
as needed under bumper

# step 4

repeat same method one section at a time with white.  
spacing between black and white is about 1/4".  
keep wet till happy with placement

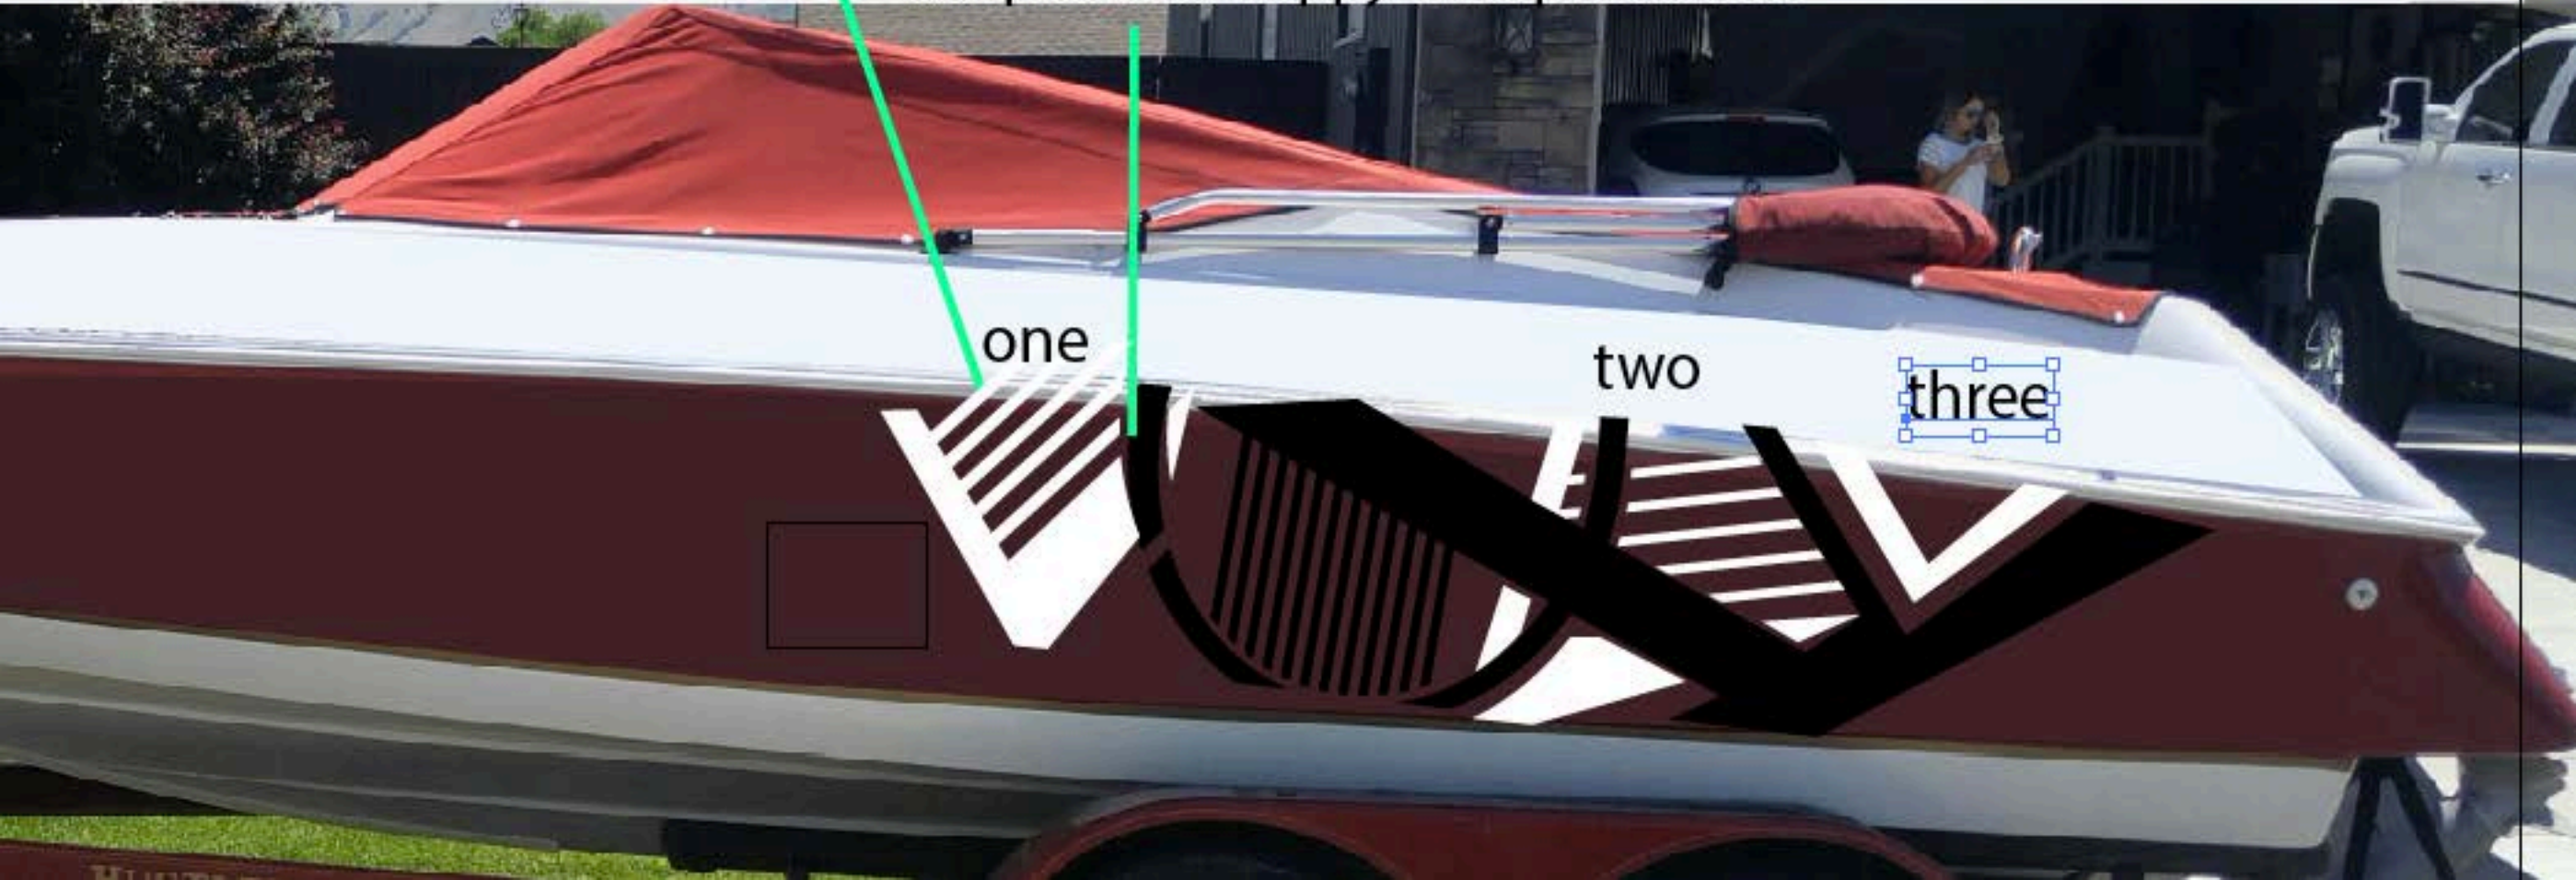

# step 5

set lower piece in place using same hinge method.  
the front tip angle will change to curve of the boat  
as will spacing below bumper.  
set it to your preference.

To keep the straight line, no trimming underneath here

place near tip of white or  
where it suits the best.



# step 6

set the top piece. about 2" from the bottom. let it follow the curve  
double check it doesnt go low in places. when masking is wet you can also twist it slightly.  
if you line up this line, reason they will line up.  
remember no one looks at the boat directly on

line up top stripe approx same height  
as front line and end to end



put the 2 white stripes on and reg numbers

# step 7

use same spacing  
as this and line up bottoms

use a 1" spacer  
or masking tape to make a consistent line

