



tape

- 1) centre and align the black piece so it follows the curve and height where you are happy and tape in place
- 2) Install using the wet method, and squeegee all water out. when complete, remove the pre mask (top paper) to just have the vinyl showing

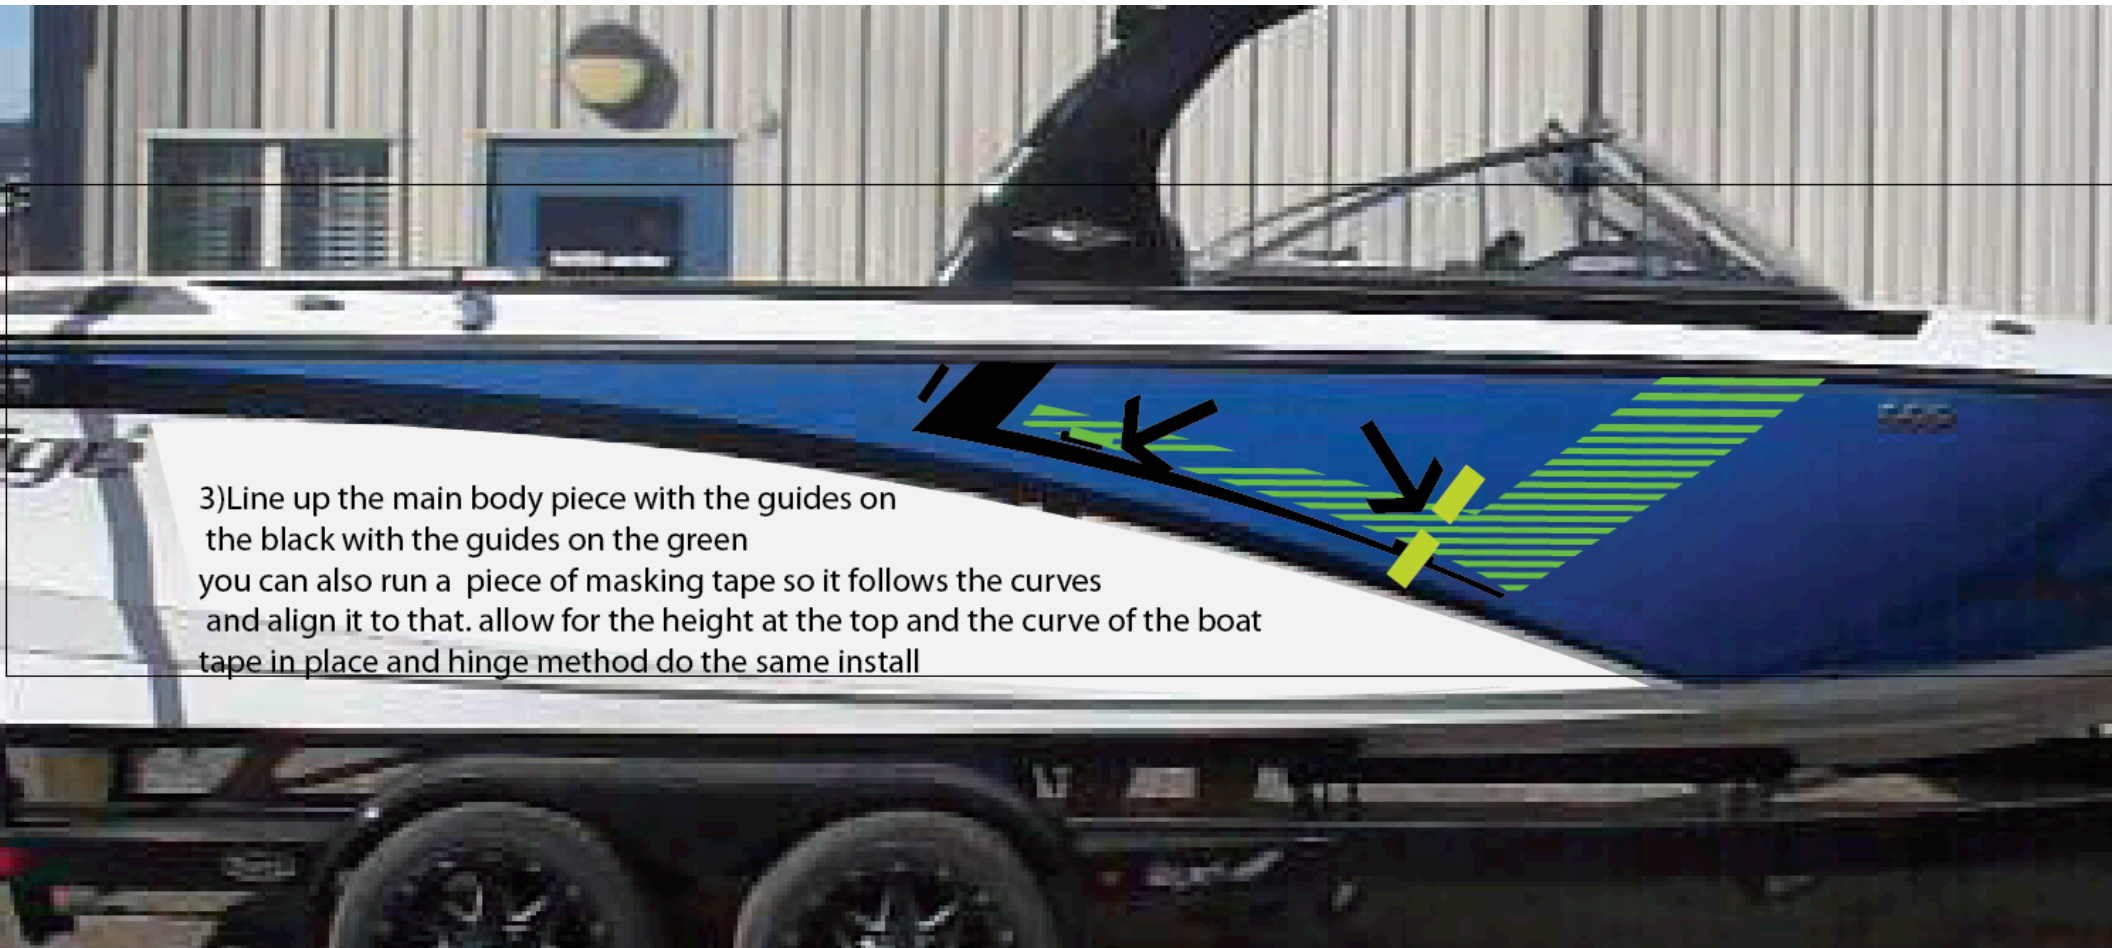

3)Line up the main body piece with the guides on the black with the guides on the green you can also run a piece of masking tape so it follows the curves and align it to that. allow for the height at the top and the curve of the boat tape in place and hinge method do the same install

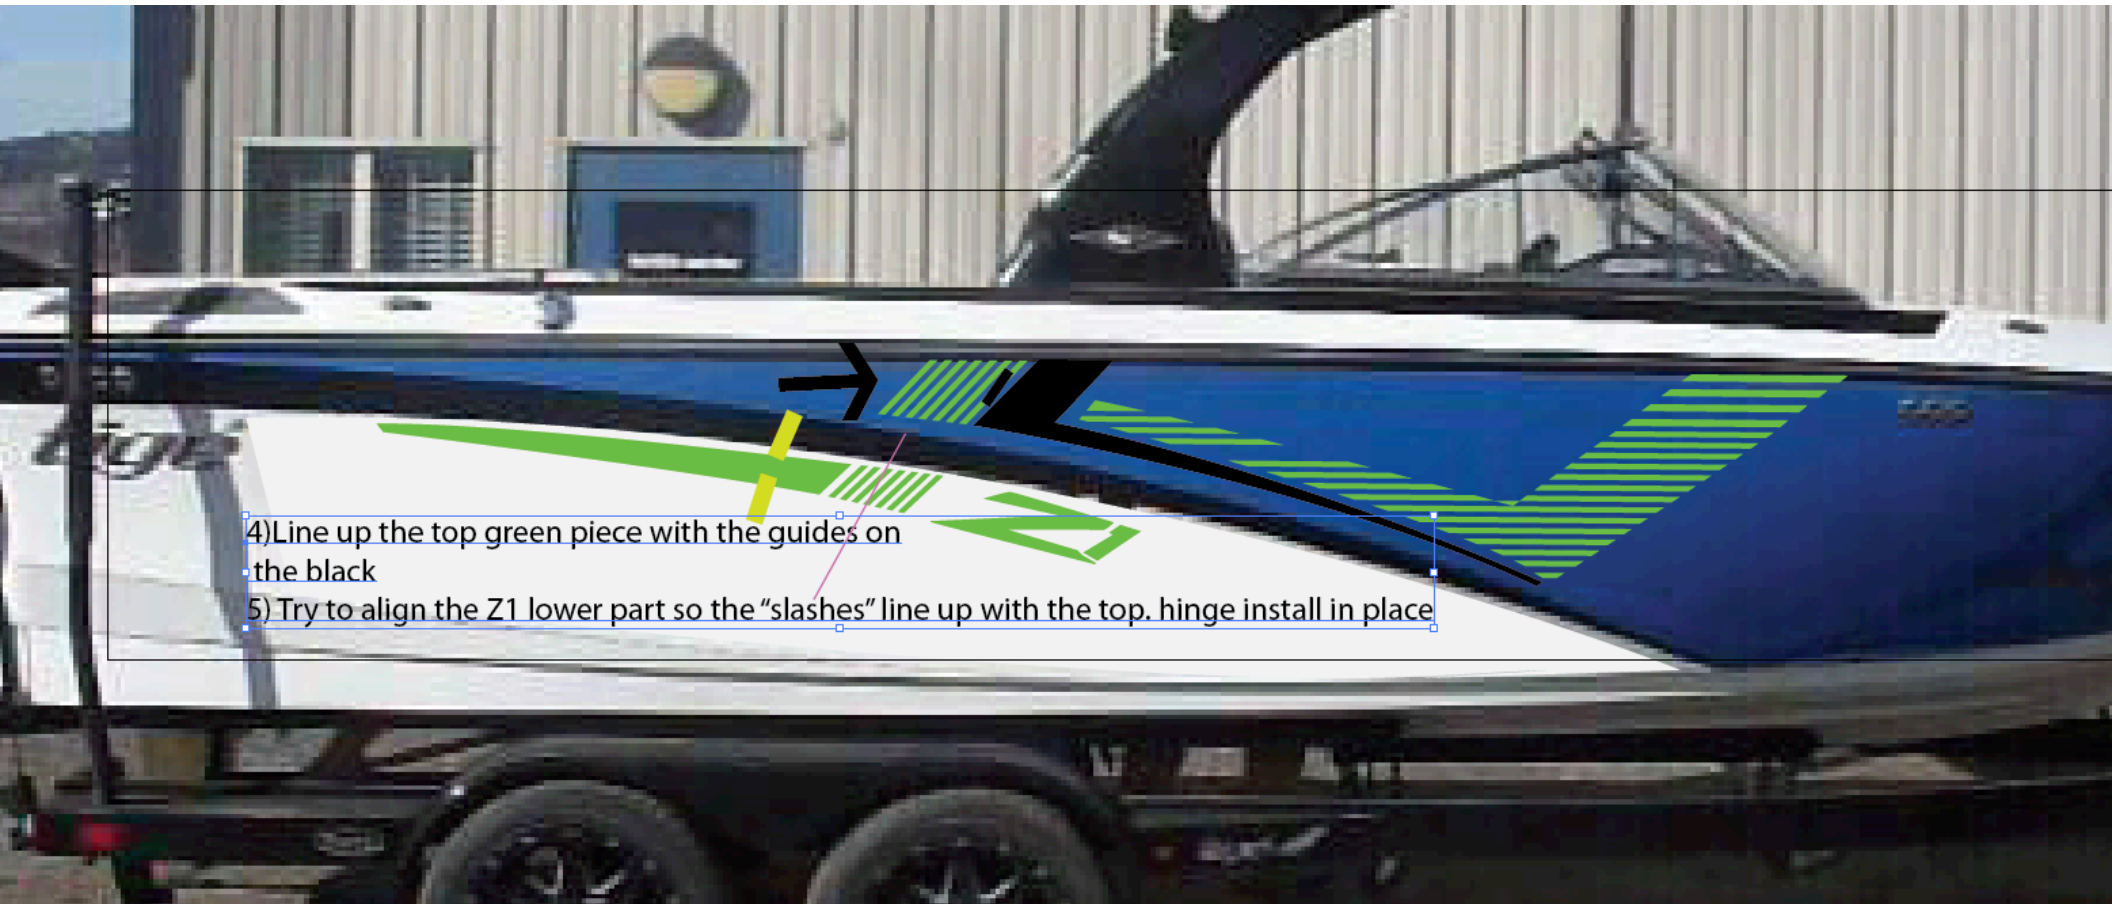

4) Line up the top green piece with the guides on the black

5) Try to align the Z1 lower part so the "slashes" line up with the top. hinge install in place